

## CONNECTING DEVICES TO WI-FI

1. UNLOCK THE DEVICE BY TOUCHING THE LOCK AND SLIDING TO THE RIGHT




2. AT THE TOP RIGHT OF THE SCREEN DRAG DOWN AT THE CLOCK :



3. AT THE PULL DOWN MENU TAP **SETTINGS**



4. THEN WI-FI – locate your WIFI from the list and TAP ON IT

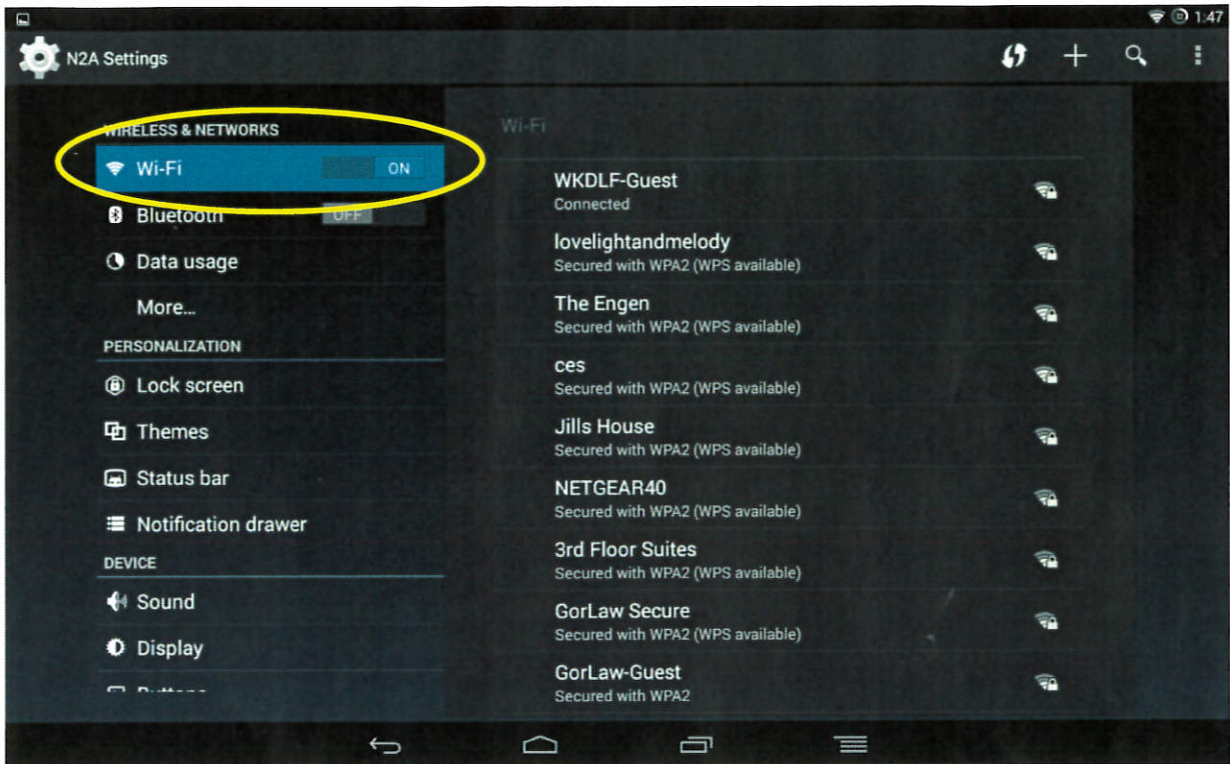

5. ENTER the WIFI SECURITY CODE then tap CONNECT

